



GI-275 Crew Profiles

What they are & how to select them

Overview

- ▶ **Crew Profiles** allow the pilot to quickly select a pre-defined configuration of the GI-275, instead of having to change individual settings.
 - ▶ Please do not adjust the individual settings; instead, load the desired crew profile.
 - ▶ The table on the next slide describes how each profile is configured.

 - ▶ **Crew Profiles** can be loaded from either the ADI (top unit) or HSI (bottom unit).
 - ▶ The examples in this how-to are shown from the ADI, but the steps are identical if loaded from the HSI.
-



Flying 20 Club Crew Profiles

Profile Name	SVT?	Description
Default	<i>depends</i>	The default start-up profile. Configuration depends upon what settings (if any) were changed by the last pilot.
Non-synthetic vision profiles:		
SIMPLE	No	The most basic display possible.
ADVANCED	No	SIMPLE + additional navigation data (e.g. bearing pointer).
FULL	No	All optional features (except SVT) enabled.
Synthetic vision (SVT) profiles:		
SVTSIMP	Yes	SIMPLE + basic SVT.
SVTADV	Yes	ADVANCED + basic SVT (including “airport signs”).
SVTFULL	Yes	All optional features (including “horizon headings”) enabled.



A) Main Menu



1) Press & hold the inner knob, or swipe from the bottom of the screen upwards to open the menu.



2) Scroll to the right with the outer (big) knob to “System”, and tap on it or press the inner knob.

B) System Menu



3a) Scroll to the right with the outer (big) knob to “Crew Profiles”.



3b) Tap on or press the inner knob to select “Crew Profiles”.


C) Crew Profile Selection



4) Scroll to the desired profile, and tap on it or press the inner knob



5) Tap on or press the inner knob to select "Activate"

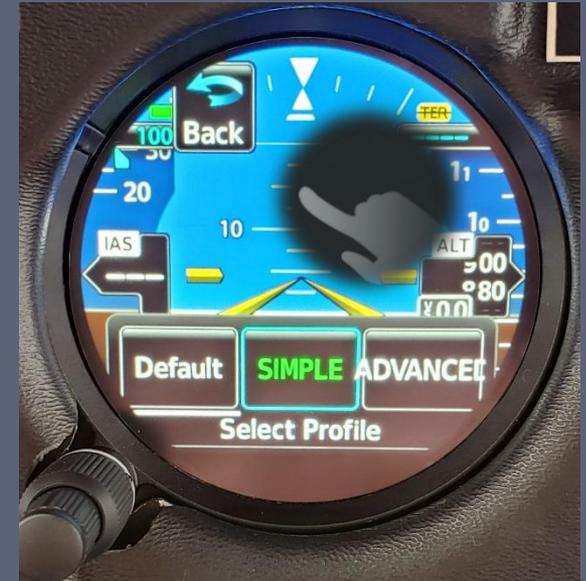

6) Tap anywhere above the menu to close the menu.

The active crew profile is highlighted in green